



### LOTO USB Oscilloscope Setup




<http://www.lotoin.com>

1. You would install the USB oscilloscope software in the PC (Microsoft Window only).
2. Download the software and driver (ZIP file), and save into a folder.

Canvas -> Lab Material -> USB Oscilloscope (OSC482S) software and driver (1)

Canvas -> Lab Material -> USB Oscilloscope (OSC482S) software and driver (2)  
(If it fails on Window 10, try to use this)

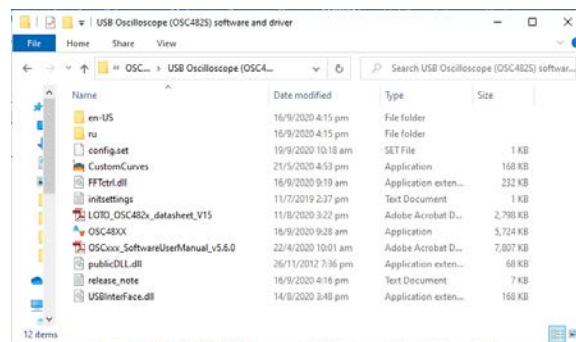

3. You connect the USB Oscilloscope to the PC with USB cable. If you could not plug 2 USB-plugs (thick and thin) into your PC, you could just plug in the thick one only.
4. Please execute the program called (OSC48XX) to start the USB oscilloscope software. (if the .net file has not been installed in PC, the system would ask you to install it)



5. In order to connect the OSC482S USB device, you should click the “Start Device” button on the left bottom.
6. Now, the device is ready to use.